



# Fully integrated microstepping motor driver using the L6470

Data brief

#### **Features**

- Voltage range from 8 V to 45 V
- Phase current up to 3 A<sub>r.m.s.</sub>
- SPI with daisy-chain feature
- Socket for external resonator or crystal
- SW input
- Thermal resistance junction-to-ambient of 40 °C/W (typical)
- Suitable to be used in combination with STEVAL-PCC009V2

### **Description**

The EVAL6470 demonstration board is a fully integrated microstepping motor driver. In combination with the STEVAL-PCC009V2 communication board and the dSPIN Evaluation Software, the board allows the engine exito investigate all the features of the 1.3470 device.


In particular, the board can be used to check the voltage mode driving and to regulate the L6470 parameters in order to fit the application requirements.

Two or no 6 F VAL6470 can be driven by a single communication board making the demonstration board suitable for the evaluation of L6470 in multinotor applications.



# 1 Board description

Figure 1. EVAL6470 demonstration board jumper and connector locations

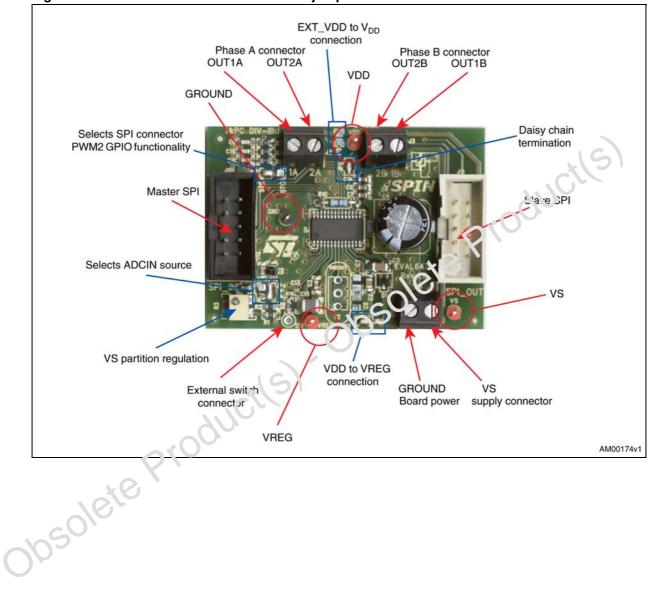

EVAL6470 Board description

Table 1. EVAL6470: jumper and connector description

Name	Туре	Function	
J4	Power supply	Board power supply	
J2	Power outputs	Bridge A outputs	
J3	Power outputs	Bridge B outputs	
J10	SPI connector	Master SPI connector	
J11	SPI connector	Slave SPI connector	
SW	NM test point	External switch connector	
VS	Test point	Motor supply voltage	
V <sub>REG</sub>	Test point	Internal 3 V regulator output	
V <sub>DD</sub>	Test point	Logic interface voltage	
GND	Test point	Ground	
JP7	Jumper	Selects SPI connector PV /wi2 GPIO functionality	
JP2	Jumper	Daisy chain tern ination	
JP5	Jumper	EXT_VD7 (SFI connector) to V <sub>DD</sub> connection	
JP3	Jumper	V <sub>DD</sub> 'c V <sub>AEG</sub> connection	
JP4	Jumper	Selects ADCIN source	

Table 2. EVAL6470: master SPI connector pinout (J10)

Pin number	Description		
1	LC4/0 BUSY open drain output		
2	L6470 FLAG open drain output		
30	Ground		
4	EXT_VDD (can be used as external logic power supply)		
5	SPI <i>master in</i> , <i>slave out</i> signal (connected to L6470 SDO output through daisy chain termination jumper JP2)		
6	SPI serial clock signal (connected to L6470 CK input)		
7	SPI master out, slave in signal (connected to L6470 SDI input)		
8	SPI slave select signal (connected to L6470 CS input)		
9	PWM1 input		
10	PWM2 input		

Table 3. EVAL6470: slave SPI connector pinout (J11)

Pin number	Description
1	L6470 BUSY open drain output
2	L6470 FLAG open drain output
3	Ground
4	EXT_VDD (can be used as external logic power supply)
5	SPI master in, slave out signal (connected to pin 5 of J10)
6	SPI serial clock signal (connected to L6470 CK input)
7	SPI master out, slave in signal (connected to L6470 SDO output)
8	SPI slave select signal (connected to L6470 CS input)
9	PWM1 input
10	PWM2 input

Table 4. EVAL6470: electrical specification (recommended values)

Parameter	Value
Supply voltage range (V <sub>S</sub> )	8 to 45 V
Output current rating	Up to 3 A <sub>rms</sub>
Logic supply voltage (V <sub>REG</sub> )	3.3 V (when externally supplied)
Logic interface voltage (V <sub>DD</sub> )	3.3 V or 5 V (when externally supplied
Logic inputs voltage range	0 to +5 V
Operating temperature ang	−25 to +125 °C
L6470H thermal resistence junction-to-ambi	ient 40 °C/W
ie Pro	

EVAL6470 Board description




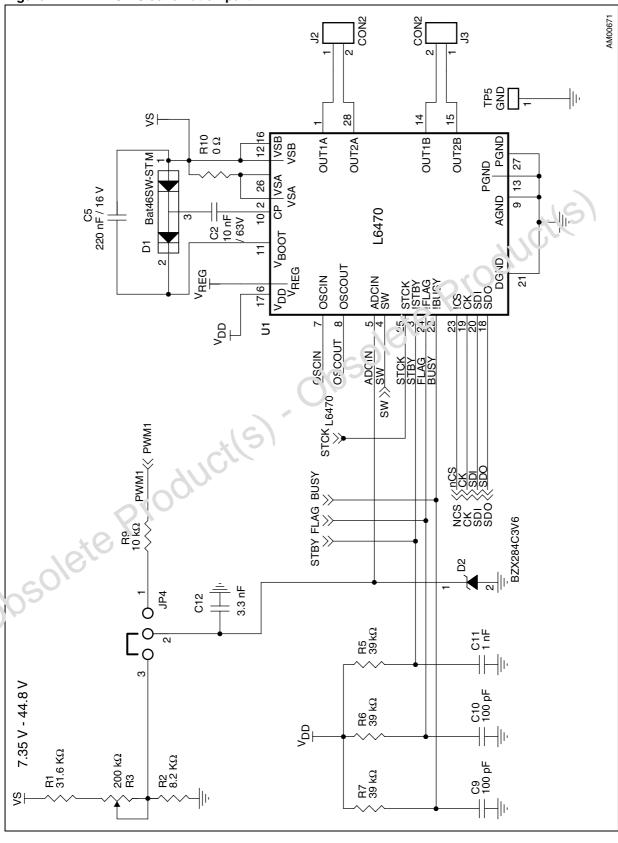


Figure 3. EVAL6470 schematic - part 2

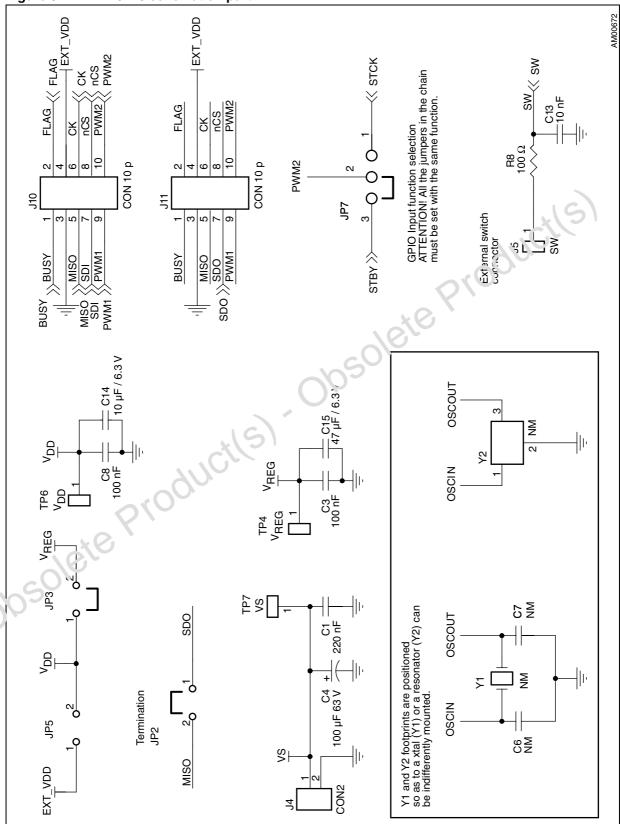

EVAL6470 Board description

Table 5. EVAL6470: component list

	Part reference	Part value	Part description
	C1	100 nF	50 V ceramic capacitor
	C2	10 nF	63 V ceramic capacitor
	C3, C8	100 nF	Ceramic capacitor
	C4	100 μF	63 V electrolytic capacitor
	C5	220 nF	16 V ceramic capacitor
	C6, C7	NM	Ceramic capacitor
	C9, C10	100 pF	Ceramic capacitor
	C11	1 nF	Ceramic capacitor
	C12	3.3 nF	Ceramic capacitor
	C13	10 nF	Ceranic capacitor
	C14	10 μF	63 \ ceramic capacitor
•	C15	 47 μF	6.3 V ceramic capacitor
	D1	BAT46SW	Low drop diode couple
	D2	BZX284C3V3	3.6 V Zener diode
	JP2, JP3		Jumper 2 x 1
	JP5	70-	Jumper 2 x 1
	JP4		Jumper 3 x 1
	JP7	<u> </u>	Jumper 3 x 1
	J2, J3, J4		Connector
	J5	NM	Strip pin
	J)0		Vertical 5 x 2 male connector
	J11		Vertical 5 x 2 male connector
	R1	31.6 kΩ	Resistor 1%
	R2	8.2 kΩ	Resistor 1%
1250.	R5, R6, R7	39 kΩ	Resistor 1%
0/02	R9	10 kΩ	Resistor 1%
	R3	200 kΩ	Trimmer
	R8	100 Ω	Resistor 1%
	R10	0 Ω	Resistor 1/8 W
	TP5		Test point
	TP4, TP6		Test point
	U1	L6470H	L6470 dSPIN
	Y1	NM	Crystal
	Y2	NM	Ceramic resonator

Figure 4. EVAL6470 layout (top layer)


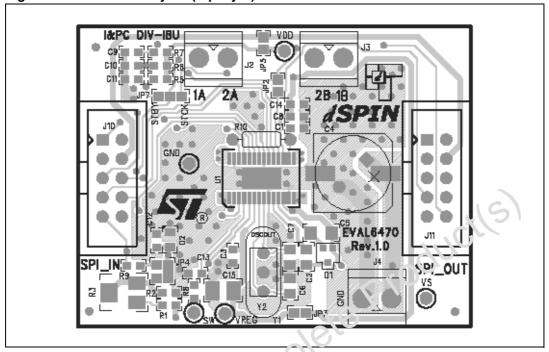


Figure 5. EVAL6470 layout (bottom layor)

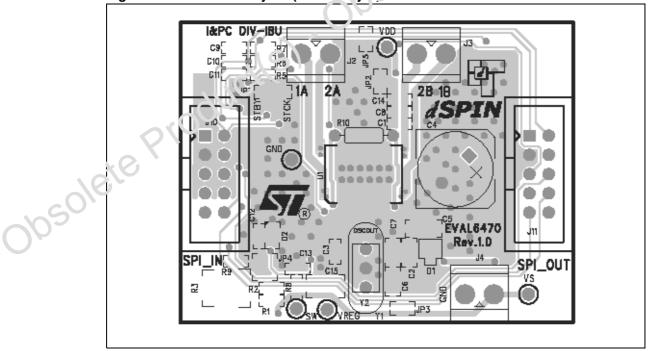

### 2 Connection to IBU universal interface board

The EVAL6470 should be connected to the interface board (STEVAL-PCC009V2 or STEVAL-PCC009V1), and the following steps performed:

- 1. Connect the interface board to the PC through the USB cable
- 2. If requested, install interface board drivers
- 3. Verify interface board operation (check if operation LED diode is turned on)
- 4. Connect the interface board 10-pin connector to the EVAL6470 J10 connector (SPI\_IN) through the 10-pole flat cable
- 5. Connect motor phases to the EVAL6470 J2 and J3 connectors
- Connect the power supply (8 V to 45 V) to the EVAL6470 J4 connector
- 7. Start the dSPIN Evaluation tool.

## 2.1 Daisy-chain mode

More EVAL6470 boards can be connected in daisy chain mod. This way you can control up to eight motors using a single communication board (STEVAL-PCC009V2 only).


To drive two or more boards in daisy chain configuration:

- 1. Connect the interface board to the PC through the USB cable
- 2. If requested, install the interface boold crivers
- 3. Verify interface board operation (check if the operation LED diode is turned on)
- 4. Connect the interface board 10-pin connector to the first EVAL6470 J10 connector (SPI\_IN) through the 10 point flat cable
- 5. Open the JP2 juriper of EVAL6470
- 6. Connect the J11 connector (SPI\_OUT) of the previous EVAL6470 to the J10 connector (SPI\_IN) of the next one through the 10-pole flat cable
- 7. Pep sat point 5 and 6 for all the others board of the chain but the last one.
- 8. Check the JP2 jumpers of EVAL6470 boards: all the jumpers but the last one should be spened
- Check the JP7 jumpers of EVAL6470 boards: all the jumpers should be in the same configuration (STCK or STBY)

Caution:

Increasing the number of devices connected in chain could degrade SPI communication performances. If communication issues are founded, try to reduce SPI clock speed.

Figure 6. Daisy chain configuration

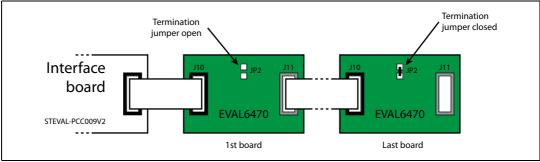

Revision history EVAL6470

# 3 Revision history

Table 6. Document revision history

Date	Revision	Changes
22-Mar-2010	1	Initial release.



#### Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidic rics (ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and servines described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property 'ig 't's 's granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warrancy covering the use in any manner whatsoever of such third party products or services or any intellectual property contained the rain

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF CANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

UNLESS EXPRESSLY APPROVED IN WEIGHT BY AN AUTHORIZED ST REPRESENTATIVE, ST PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROFERTY OR ENVIRONMENTAL DAMAGE. ST PRODUCTS WHICH ARE NOT SPECIFIED AS "AUTOMOTIVE GRADE" MAY ONLY BE "SED IN AUTOMOTIVE APPLICATIONS AT USER'S OWN RISK.

Resale of ST | roducts with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2011 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Philippines - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com

