DELTA ELECTRONICS, INC.

252, SHANG YING ROAD, KUEI SAN

TAOYUAN SHIEN 333, TAIWAN, R. O. C.

TEL: 886-(0)3-3591968

FAX: 886-(0)3-3591991

# SPECIFICATION FOR APPROVAL

Customer:			
Description:	DC FAN		
Customer P/N:		REV:	
Delta Model NO.:	AFB1212SH		
Sample Rev:	00	Issue NO:	
Sample Issue Date:	APR.19.2004.	Quantity:	

#### 1. SCOPE:

THIS SPECIFICATION DEFINES THE ELECTRICAL AND MECHANICAL CHARACTERISTICS OF THE DC BRUSHLESS AXIAL FLOW FAN. THE FAN MOTOR IS WITH TWO PHASES AND FOUR POLES.

## 2. CHARACTERS:


ITEM	DESCRIPTION
RATED VOLTAGE	12 VDC
OPBRATION VOLTAGE	7.0 – 13.8 VDC
INPUT CURRENT	0.53 (MAX. 0.80) A
INPUT POWER	6.36 (MAX. 9.60) W
SPEED	3400 R.P.M. (REF.)
MAX. AIR FLOW (AT ZERO STATIC PRESSURE)	3.203 (MIN. 2.883 ) M <sup>3</sup> /MIN. 113.11 (MIN. 101.81 ) CFM
MAX. AIR PRESSURE (AT ZERO AIRFLOW)	10.92 (MIN. 8.85 ) mmH <sub>2</sub> 0 0.430 (MIN. 0.348 ) inchH <sub>2</sub> 0
ACOUSTICAL NOISE (AVG.)	46.5 (MAX. 49.5) dB-A
INSULATION TYPE	UL: CLASS A
i	i

(continued)

PART NO: DELTA MODEL: AFB1212SH

	!
INSULATION STRENGTH	10 MEG OHM MIN. AT 500 VDC (BETWEEN FRAME AND (+) TERMINAL)
DIELECTRIC STRENGTH	5 mA MAX. AT 500 VAC 60 Hz ONE MINUTE, (BETWEEN FRAME AND (+) TERMINAL)
EXTERNAL COVER	OPEN TYPE
LIFE EXPECTANCE	70,000 HOURS CONTINUOUS OPERATION AT 40 °C WITH 15 ~ 65 %RH.
ROTATION	CLOCKWISE VIEW FROM NAME PLATE SIDE
OVER CURRENT SHUT DOWN	THE CURRENT WILL SHUT DOWN WHEN LOCKING ROTOR
LEAD WIRE	UL 1007 -F- AWG #24 BLACK WIRE NEGATIVE(-) RED WIRE POSITIVE(+)
	-

- NOTES: 1. ALL READINGS ARE MEASURED AFTER STABLY WARMING UP THROUGH 10 MINUTES.
  - 2. THE VALUES WRITTEN IN PARENS, ( ), ARE LIMITED SPEC.
  - 3. ACOUSTICAL NOISE MEASURING CONDITION:

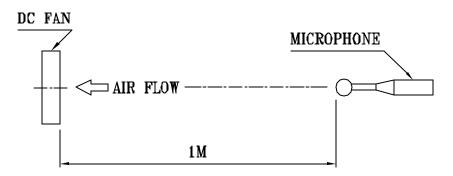

NOISE IS MEASURED AT RATED VOLTAGE IN FREE AIR IN ANECHOIC CHAMBER WITH B & K SOUND LEVEL METER WITH MICROPHONE AT A DISTANCE OF ONE METER FROM THE FAN INTAKE.

PART NO:	
DELTA MODEL: AFB1212SH	
3. MECHANICAL:	
3-1. DIMENSIONS	SEE DIMENSIONS DRAWING
3-2. FRAME	PLASTIC UL: 94V-0
3-3. IMPELLER	PLASTIC UL: 94V-0
3-4. BEARING SYSTEM	TWO BALL BEARINGS
3-5. WRIGHT	198 GRAMS
4. ENVIRONMENTAL:	
4-1. OPERATING TEMPERATURE	10 TO +60 DEGREE C
4-2. STORAGE TEMPERATURE	40 TO +75 DEGREE C
4-3. OPERATING HUMIDITY	5 TO 90 % RH
4-4. STORAGE HUMIDITY	5 TO 95 % RH

# 5. PROTECTION:

#### 5-1. LOCKED ROTOR PROTECTION

IMPEDANCE OF MOTOR WINDING PROTECTS MOTOR FROM FIRE IN 96 HOURS OF LOCKED ROTOR CONDITION AT THE RATED VOLTAGE.

#### 5-2. POLARITY PROTECTION

BE CAPABLE OF WITHSTANDING IF REVERSE CONNECTION FOR POSITIVE AND NEGATIVE LEADS.

#### 6. RE OZONE DEPLETING SUBSTANCES:

6-1. NO CONTAINING PBBs, PBBOs, CFCs, PBBEs, PBDPEs AND HCFCs.

#### 7. PRODUCTION LOCATION

7-1. PRODUCTS WILL BE PRODUCED IN CHINA OR THAILAND OR TAIWAN.

DELTA MODEL: AFB1212SH

#### 8. BASIC RELIABILITY REQUIREMENT:

<b>8</b> −1.	THERMAL	LOW TEMPERATURE: -40°C
	CYCLING	HIGH TEMPERATURE: +80°C
		SOAK TIME: 30 MINUTES

TRANSITION TIME < 5 MINUTES

DUTY CYCLES: 5

8-2. HUMIDITY TEMPERATURE: +25°C ~ +65°C EXPOSURE HUMIDITY: 90-98% RH ⊕ +65°C

FOR 4 HOURS/CYCLE

POWER: NON-OPERATING TEST TIME: 168 HOURS

8-3. VIBRATION TEMPERATURE: +25°C

ORIENTATION: X, Y, Z POWER: NON-OPERATING

VIBRATION LEVEL: OVERALL gRMS=3.2

FREQUENCY(Hz)	PSD(G <sup>2</sup> /Hz)
10	Ò.040
20	0.100
40	0.100
800	0.002
1000	0.002

TEST TIME: 2 HOURS ON EACH ORIENTATION

8-4. MECHANICAL TEMPERATURE: +20°C

SHOCK ORIENTATION: X, Y, Z
POWER: NON-OPERATING

ACCELERATION: 20 G MIN.
PULSE: 11 ms HALF-SINE WAVE
NUMBER OF SHOCKS: 5 SHOCKS

FOR EACH DIRECTION


8-5. LIFE TEMPERATURE: MAX, OPERATING TEMPERATURE

POWER: OPERATING

DURATION: 1000 HOURS MIN.

PART	NO:				
DELTA	MODEL:	AFB1212SH			

## 9. P & Q CURVE:

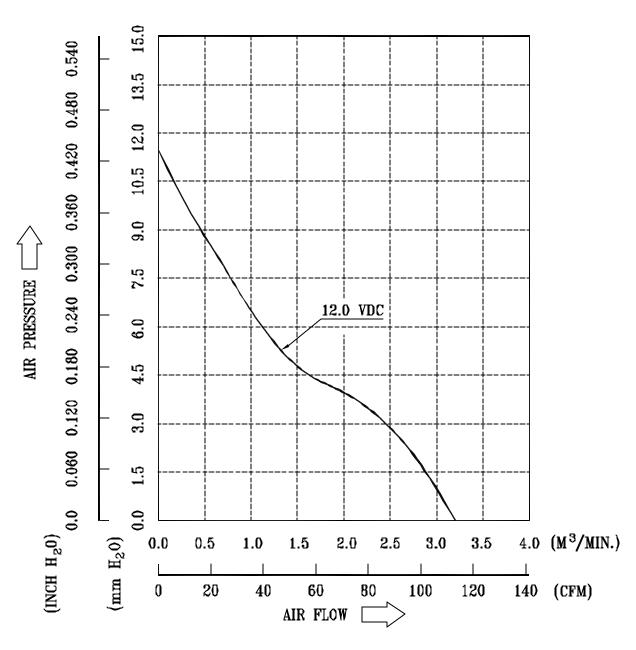

\* TEST CONDITION: INPUT VOLTAGE ------ OPERATION VOLTAGE TEMPERATURE ROOM TEMPERATURE HUMIDITY ------ 65%RH


A00

 PART NO:		 	 	
DELTA MODEL:	AFB1212SH	 	 	

#### 10. DIMENSION DRAWING:

LABEL:



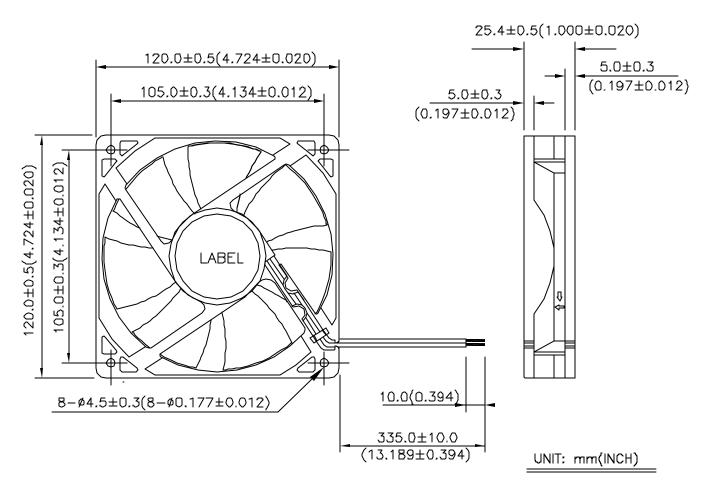

page: 6



# **Descriptions:**

- 1. Delta will not guarantee the performance of the products if the application condition falls outside the parameters set forth in the specification.
- A written request should be submitted to Delta prior to approval if deviation from this specification is required.
- 3. Please exercise caution when handling fans. Damage may be caused when pressure is applied to the impeller, if the fans are handled by the lead wires, or if the fans are hard-dropped to the production floor.
- 4. Except as pertains to some special designs, there is no guarantee that the products will be free from any such safety problems or failures as caused by the introduction of powder, droplets of water or encroachment of insect into the hub.
- 5. The above-mentioned conditions are representative of some unique examples and viewed as the first point of reference prior to all other information.
- 6. It is very important to establish the correct polarity before connecting the fan to the power source. Positive (+) and Negative (-). Damage may be caused to the fans if connection is with reverse polarity, as there is no foolproof method to protect against such error.
- 7. Delta fans are not suitable where any corrosive fluids are introduced to their environment.
- 8. Please ensure all fans are stored according to the storage temperature limits specified. Do not store fans in a high humidity environment. We highly recommend performance testing is conducted before shipping, if the fans have been stored over 6 months.
- Not all fans are provided with the Lock Rotor Protection feature. If you impair the rotation of the impeller for the fans that do not have this function, the performance of those fans will lead to failure.
- 10. Please be cautious when mounting the fan. Incorrect mounting of fans may cause excess resonance, vibration and subsequent noise.
- 11. It is important to consider safety when testing the fans. A suitable fan guard should be fitted to the fan to guard against any potential for personal injury.
- 12. Except where specifically stated, all tests are carried out at relative (ambient) temperature and humidity conditions of 25°C, 65%. The test value is only for fan performance itself.
- 13. Be certain to connect an "over 4.7μF" capacitor to the fan externally when the application calls for using multiple fans in parallel, to avoid any unstable power.

1248, followed by VHE; Model WFB followed by 1248, followed by HHE. Model EFB followed by 0912 or 0924, followed by H, HH, L, M, SH or VH.

Model WFB followed by 1212 or 1224, followed by H, HE, HH, HHE, L, LE, M or ME; Model WFB followed by 1212, 1212, followed by B or BE.

Model BFB followed by 1212, 1224 followed by HE.

Model BFB followed by 0305, 03505, followed by HP, LP, MP.

Model BFB followed by 0505 or 0512, followed by HP, LP, MP. Model AFB or ASB followed by 0505 or 0512, followed by HA, LA or MA. Model BFB followed by 0712, 0724, followed by H, L, M.

Model BFC followed by 1212, followed by A, B; Models BFC1212C, BFC1224C, BFC1248C.

Model EFB followed by 0512, followed by HHA, HA, LA or MA, and EFB0505HA, EFB0505MA, EFB0505LA, followed by FOO or STD.;

Model EFB followed by 0512, followed by HHA, HA, LA or MA, and EFBUSUSHA, EFBUSUSHA, EFBUSUSHA, followed by POO or STD.;

Model EFB followed by 0505, followed by HA, LA or MA, followed by FOO or STD.

Model AFC followed by 0512, 0612, 0712, 0812, 0824, 0912 or 0924, followed by "A", "AB", "AD", "B", "BB", "BD" or "C"; Model AFC

followed by 0912, followed by "A" or "B", followed by -(H), -(HH), -(M); Model ASC followed by 0612, 0812, 0912 followed by "A" or "B".

Model ASB followed by 0605, followed by H, L, M; Model ASB followed by 0612, followed by H-SB, L-SB or M-SB; Model ASB followed by 0812 or 0824, followed by H, HH, L, LL or M; Model ASB followed by 0912, 0924, followed by H, HH, L, L-V, M; Model ASB followed by 0924 followed by H, HH, L, L-V, M; Model ASB followed by 0924 followed by H, HH, L, LL N, M, M M. 0812, followed by H, H-N, L, L-N, M, M-N

Model AFB followed by 0612, followed by H, HH, L, M, followed by SB; Model AFB followed by 0812, followed by H, L or M, followed by

SB; Model AFB followed by 0912, followed by H, L or M, followed by SB.

Model AFB followed by 1212, followed by HE, HHE, LE, ME, SHE VHE; Model AFB followed by 1224, followed by HE, HHE, LE, ME, SHE, VHE; Model AFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; Model EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by 1212, followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by HE, HHE, LE, ME, ME, VHE; MODEL EFB followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by HE, HHE, LE, ME, VHE; MODEL EFB followed by HE, HHE, ME, ME, ME, ME, ME, ME, ME, ME ME, SHE, VHE; Model EFB followed by 1224, followed by HE, HHE, LE, ME, SHE, VHE; Model EFB followed by 1248, followed by HE, HHE, LE, ME, SHE, VHE:

Model BFB followed by 1012, followed by H, HH, L, LL or M; Model BFB followed by 1024, followed by H, HH, L, LL or M; Model BFB followed by 1212, followed by H, HH, L, LL or M; Model BFB followed by 1224, followed by H, HH, L, LL or M; Model BFB followed

by 1248, followed by H, HH, L, LL or M.

Model BFB followed by 1212, 1224, followed by HE, HHE, LE, ME or VH; Model BFB followed by 1248, followed by HE, LE or ME; Model BFB followed by 1612, followed by H, L or M; Model BFB followed by 1624, followed by H, L or M; Model BFB followed by 1648, followed by H, L or M.

Models BFB0405HE, -LE, -ME, BFB0412HE, -HHE, -LE, -ME.

Models AUB0812H, -HH, -L, -LB, -M, -SHB, -VH, AUB0824H, -HH, -L, -LB, -M, -SHB, -VH.
Model BFB followed by 0505, 0512, 0524, followed by H, HH, L or M; Model BSB followed by 0505, 0512, 0524, followed by H, HH, L or M.

Models EFB1212 -H, -HF, -HH, -HHF, -L, -LF, -M, -MF, -SH, -VH, -VHF, EFB1224 -H, -HF, -HH, -HHF, -L, -LF, -M, -MF, -SH, -VH, -VHF, EFB1248-H, -HH, -L, -M, -SH, -VH.

Model EFB followed by 0405, followed by HD, HHD, LD, LLD, MD VHD; Model EFB followed by 0412, followed by HD, HHD, LD, LLD,

MD, VHD, Model EFB followed by 0424, followed by HD, HHD, LD, LLD, MD, VHD.

Models BFB0305HA, -HHA, -LA, -MA, BFB0312HA, -HHA, -LA, -MA.

Models AFB1512H, -L, -M, AFB1548H, -L, -M, AFB1712H, -L, -M, AFB1748H, -L, -M, EFB1248HF, -HHF, -LF, -MF, -VHF, EFB1548HG, -HHG, -LG, -MG, -VHG, EFB1748HG, -HHG, -LG, -MG, -VHG.

Models AFB0305LK, -MK, -HK, AFB0405LK, -MK, -HK.

Model BFB03505 followed by HR, LR, MR; Model BFB03505 followed by HA, HHA, LA, MA; Model BFB03512 followed by HA, HHA, LA, MA

Models AFB02505LB, -MB, -HB, -HHB.

Model SFB followed by 0112, followed by H, HH, M or VH; Model SUB followed by 0112, 0212, followed by H, HH, M or VH. Model EFB followed by 1512, 1712, followed by HG, HHG, LG, MG; Model EFB followed by 1524, 1724, followed by HG, HHG, LG, MG,

Model EFB followed by 0912, 0924, followed by HE, HHE, LE or ME.

Model FFB followed by 0848, followed by SHE; Model FFB followed by 0912 or 0924, followed by EHE, HHE, SHE or VHE; Model FFB followed by 0948, followed by HHE, SHE or VHE; Model FFB followed by 1212 or 1224, followed by EHE, HE, HHE, SHE or VHE; Model FFB followed by 1248, followed by EHE, SHE or VHE.

Model EFC followed by 1212 or 1224, followed by DE; Model EFC0412 followed by AD or BD.

Model BFB followed by 0405, 0412, 04505, 04512, 0505 or 0512, followed by HA, HHA, LA or MA.

Model EUB followed by 0405, 0412 or 0424, followed by HD, HHD, LD, LLD or MD; Model EUB followed by 0412 or 0424, followed by

Model ASB followed by 0605, followed by HB, HHB, LB or MB; Model ASB followed by 0612 or 0624, followed by HB, HHB, LB, MB or VHB, Model AUB followed by 0605, followed by HB, HHB, LB or MB; Model AUB followed by 0612 or 0624, followed by HB, HHB, LB, MB

Model AFB followed by 1524, 1724, followed by H, HH, L or M; Model EFC followed by 1248, followed by EE; Model FFB followed by 0812, 0824, followed by HHE, SHE or VHE; Model FFB0848 followed by HHE, VHE or SHE.

Model BFB followed by 0405, 0505 or 04505, followed by HP, LP or MP.

Model EFB followed by 0612, followed by HA, HHA, LA or MA. Model AUB followed by 0612, 0624 or 0648, followed by EH, SH or VH.

Model EFB followed by 0812 or 0824, followed by HE, HHE, LE or ME.

Model ASB followed by 0605, followed by HD, HHD, LD or MD; Model ASB followed by 0612 or 0624, followed by HD, HHD, LD, MD or VHD; Model AUB followed by 0605, 0612 or 0624, followed by HD, HHD, LD or MD; Model AUB followed by 0612 or 0624, followed by

Model EFB followed by 0912 or 0924, followed by HF, HHF, LF, MF, SHF or VHF.

Model EFB followed by 1312 or 1324, followed by HE, HHE, LE, ME, SHE or VHE; Model EFB followed by 1348, followed by HE, HHE, LE. ME or VHE.

Model ASB followed by 0712 or 0724, followed by H, HH, L, M or VH; Model AUB followed by 0712 or 0724, followed by H, HH, L, M or

Model EFB followed by 0812 or 0824, followed by EHF, HF, HHF, LF, **MF**, **SHF or VHF**.

Model EFC followed by 0912, followed by AE or BE.

Model HFB followed by 0605, 0612 or 0624, followed by HB, HD, HHB, **HHD**, **LB**, **LD**, **MB** or MD.

Model AFB followed by 1212 or 1224, followed by H, HH, L, M, SH or VH.

Model KFB followed by 03205, followed by HP, LP or MP; Model KFB followed by 03205, followed by HA, LA or MA.

Model FFB followed by 1312, 1324, 1348, followed by EHE, SHE or VHE.



Certification Record No: 091949 0 000

Class No: 3812 01

			C1a35 140. 5012 01
FFB1324VHE	24	900	STD, F00, R00
FFB1324SHE	24	1260	STD, F00, R00
FFB1324EHE	24	1800	STD, F00, R00
FFB1348VHE	48	500	STD, F00, R00
FFB1348SHE	48	680	STD, F00, R00
FFB1348EHE	48	1000	STD, F00, R00
AFB1212L	12	210	STD, F00, R00
AFB1212M	12	270	STD, F00, R00
AFB1212H	12	350	STD, F00, R00
AFB1212HH	. 12	500	STD, F00, R00
AFB1212VH	12	600	STD, F00, R00
AFB1212SH	12	800	<b>STD</b> , F00, R00
AFB1224L	24	140	STD, F00, R00
AFB1224M	24	180	STD, F00, R00
AFB1224H	24	210	STD, F00, R00
AFB1224HH	24	270	STD, F00, R00
AFB1224VH	24	350	<b>STD</b> , F00, R00
AFB1224SH	24	420	<b>STD</b> , F00, R00
AUB0712L	12	80	<b>STD</b> , F00, R00
AUB0712M	12	120	<b>STD,</b> F00, R00
AUB0712H	12	180	<b>STD,</b> F00, R00
AUB0712HH	12	210	<b>ST</b> D, F00, R00
AUB0712VH	12	300	STD, F00, R00
AUB0724L	24	50 QE	

# VDE Prüf- und Zertifizierungsinstitut Gutachten mit Fertigungsüberwachung

Ausweis-Nr. / Blatt / Licence No. page 128374 2

Name und Sitz des Genehmigungs-Inhabers / Name and registered seat of the Licence holder Delta Electronics Inc., 186 Ruey Kuang Road, NEIHU TAIPEI (114), TAIWAN

Aktenzeichen / File ref. 1164100-2611-0003 / 31147 / F131 / DO letzte Änderung / updated Datum / Date 2003-05-28 2000-05-26

Dieses Blatt gilt nur in Verbindung mit Blatt 1 des Gutachtens mit Fertigungsüberwachung Nr. 128374. This supplement is only valid in conjunction with page 1 of the Certificate of Conformity with factory surveillance No. 128374.

# Einbauventilator, Büromaschinen Fan for building-in, office machines

Typ(en) / Type(s):

AUB0612VH/SH/EH	DÇ	12V
AUB0624VH/SH/EH	DC	24V
AUB0648VH/SH/EH	DC	48V
FFB1324VHE/SHE/EHE	DC	24V
FFB1348VHE/SHE/EHE	DC	48V
AUB0605LD/MD/HD/HHD		5V
AUB0612LD/MD/HD/HHD/VHD		12V
AUB0624LD/MD/HD/HHD/VHD	DC	24V
EFB1312LE/ME/HE/HHE/VHE/SHE		12V
EFB1324LE/ME/HE/HHE/VHE/SHE	DC	24V
EFB1348LE/ME/HE/HHE/VHE	DC	48V
EFB0912LF/MF/HF/HHF/VHF/SHF	DC	12V
EFB0924LF/MF/HF/HHF/VHF/SHF	DC	24V
AFB1512L/M/H	DC	12V
AFB1712L/M/H	DC	12V
FFB1312VHE/SHE/EHE	DC	12V
AUB0505LB/MB/HB	DC	5V
AUB0512LB/MB/HB/HHB	DC	12V
AUB0524LB/MB/HB/HHB	DÇ	24V
EFB1248L/M/H/HH/VH/SH	DC	48V
KFB03205LA/MA/HA/LP/MP/HP	DC	5V
EFB0812LF/MF/HF/HHF/VHF/SHF/E		
EFB0824LF/MF/HF/HHF/VHF/SHF/E	HF	DC 24V
HFB0605LB/LD/MB/MD/HB	DC	5 <b>V</b>
HFB0612LB/LD/MB/MD/HB/HD/HHE		
HFB0624LB/LD/MB/MD/HB/HD		24V
AFB1212L/M/H/HH/VH/SH AFB1224L/M/H/HH/VH/SH AUB0712L/M/H/HH/VH AUB0724L/M/H/HH/VH		12V
AFB1224L/M/H/HH/VH/SH	DC	24V
AUB0712L/M/H/HH/VH		12V
AUB0724L/M/H/HH/VH		24V
EFC0912AE/BE	DC	12V
AFB0505LD/MD/HD	DC	5V
AFB0512LD/MD/HD/HHD/VHD		12V
AFB0524LD/MD/HD/HHD/VHD	DC	24V
FUB0412MN/HN/HHN/VHN		12V
FUB0424MN/HN/HHN/VHN	DC	24V

Fortsetzung siehe Blatt 3 / continued on page 3



4