

# High Efficiency PolyPhase Synchronous Boost Converter

## DESCRIPTION

Demonstration circuit DC1411 is DC/DC boost converter featuring the LTC3787 constant frequency current mode boost controller. The DC1411A operates over 5V to 24V input and provides 6A to 16A of output current as shown in figure 3. The 350kHz constant frequency operation results in small and efficient circuit. The converter provides high output voltage accuracy (typically  $\pm 3\%$ ) over wide load range with no minimum load requirement. The demonstration circuit can be easily modified to generate different output voltages. Please consult LTC factory for details.

The DC1411 has small circuit footprint. It is a high performance and cost effective solution for Telecom, Automotive and Power Over Ethernet applications.

**Design files for this circuit board are available. Call the LTC factory.**

LTC, LTC, LTM, LT, Burst Mode, OPTI-LOOP, Over-The-Top and PolyPhase are registered trademarks of Linear Technology Corporation. Adaptive Power, C-Load, DirectSense, Easy Drive, FilterCAD, Hot Swap, LinearView,  $\mu$ Module, Micropower SwitcherCAD, Multimode Dimming, No Latency  $\Delta\Sigma$ , No Latency Delta-Sigma, No RSENSE, Operational Filter, PanelProtect, PowerPath, PowerSOT, SmartStart, SoftSpan, Stage Shedding, SwitcherCAD, ThinSOT, UltraFast and VLDO are trademarks of Linear Technology Corporation. Other product names may be trademarks of the companies that manufacture the products.

**Table 1. Performance Summary**

PARAMETER	CONDITION	VALUE
Minimum Input Voltage	$I_{OUT} = 0A$ to 6A	5V
Maximum Input Voltage	$I_{OUT} = 0A$ to 16A	24V
$V_{OUT}$	$V_{IN} = 5V$ to 24V, $I_{OUT} = 0A$ to 6A	24V $\pm 3\%$
Typical Output Ripple $V_{OUT}$	$V_{IN} = 5V$ to 24V, $I_{OUT} = 6A$	200mV <sub>p-p</sub>
Nominal Switching Frequency		350kHz

## QUICK START PROCEDURE

Demonstration circuit DC1411 is easy to set up to evaluate the performance of the LTC3787. For proper measurement equipment setup refer to Figure 1 and follow the procedure below:

**NOTE:** When measuring the input or output voltage ripple, care must be taken to minimize the length of oscilloscope probe ground lead. Measure the input or output voltage ripple by connecting the probe tip directly across the  $V_{IN}$  or  $V_{OUT}$  and GND terminals as shown in Figure 2.

1. With power off, connect the input power supply to  $V_{in}$  and GND.
2. Check the  $V_{cc}$  Bias voltage-setting jumper JP5. Move it into  $V_{in}$  position if required.

3. Turn the input power source on and slowly increase the input voltage. Be careful not to exceed 24V.

**NOTE:** Make sure that the input voltage  $V_{in}$  does not exceed 24V. If higher operating voltage is required, power components with higher voltage ratings should be used.

4. Set the input voltage to 6V and check for the proper output voltage of 24V. If there is no output, temporarily disconnect the load to make sure that the load is not set too high.
5. Once the proper output voltage is established, adjust the load and observe the output voltage regulation, ripple voltage, efficiency and other parameters.

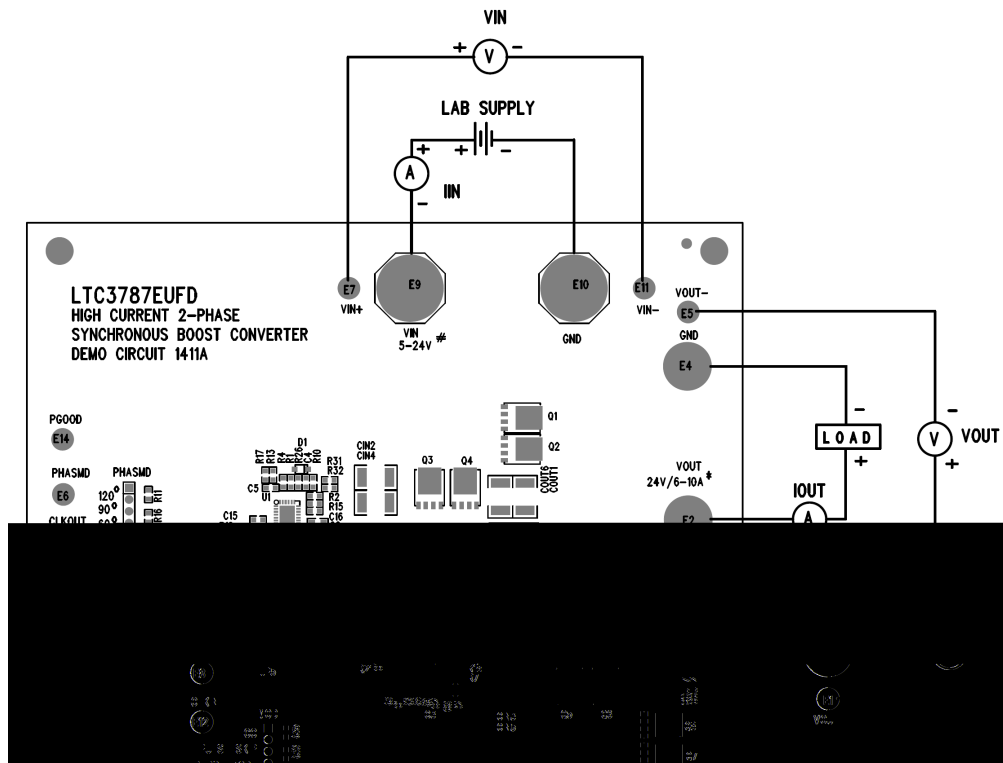


Figure 1. Proper Measurement Equipment Setup

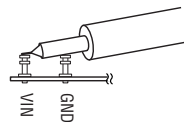


Figure 2. Measuring Input or Output Ripple

## CHANGING THE OUTPUT VOLTAGE

To set the output voltage lower than 24V, change the bottom voltage divider resistors connected to LTC3787 FB pin (see the schematic on page 4). To get higher than 24V output voltage MOSFETs and capacitors with higher voltage ratings may be required. Please contact LTC factory for details.

**Note that the output voltage will start following the input voltage** when input voltage is greater than the voltage set by the voltage divider. In this mode (**wire mode**) the synchronous output rectifier MOSFET is turned continuously ON. The only losses in this

mode are due to the current sense resistors, inductors and output MOSFETs DC resistance.

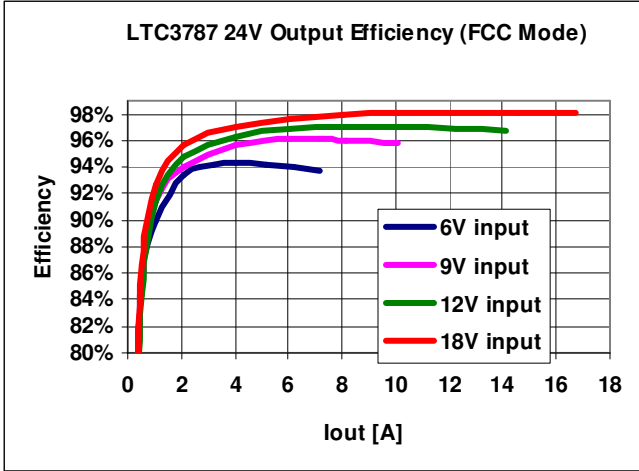


Figure 3. High efficiency of DC1411 allows the board to be used in thermally critical applications with outputs over 3A.

**CONVERTER EFFICIENCY AND OUTPUT CURRENT**

The DC1411 output current capability depends on the input voltage and proper cooling. Typical performance of DC1411A is shown in Figure 3. As can be seen from Figure 3, the output current capability depends on the input voltage. Also, when input voltage is equal to, or higher than the output voltage setting (wire mode) the efficiency is very high (99%) since the converter is not really running and the output MOSFET is shorting V<sub>in</sub> to V<sub>out</sub>.

**OUTPUT LOAD STEP RESPONSE**

The load step response of DC1411A is very good even though relatively small amount of output capacitance is present at the output. If higher load steps need to be handled more output capacitance can be added in order to keep the voltage transients at the desired level. The load step transients are shown in Figure 4. Also, note that the load step response even from 0% load is excellent thanks to synchronous rectification.

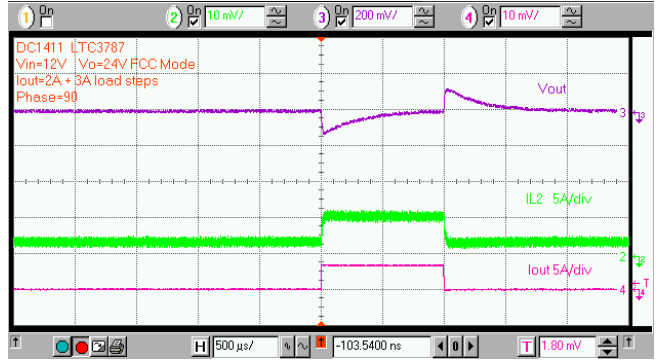


Figure 4. Fast transient response of DC1411 is achieved with a small amount of output capacitance.

**SOFT START FUNCTION**

The DC1411 features soft-start circuit that controls the inrush current and output voltage ramp at startup. The capacitor C<sub>15</sub> (Figure 6) controls the startup period. The startup waveforms are shown in figure 5. Please note the output voltage step at about -6ms mark. The step is resulting from synchronous MOSFET being turned on. When the synchronous MOSFET is turned on the voltage drop across the synchronous MOSFET (body diode) is reduced from about 0.7V to I<sub>out</sub>\*R<sub>dson</sub>. While the synchronous MOSFET is in off state (prior to -6ms mark) the synchronous MOSFET body diode is dissipating about 0.7V\*I<sub>out</sub> or about 4.2W with 6A load. Please refer to the LTC3787 data sheet for details about proper handling of synchronous MOSFET in your application.

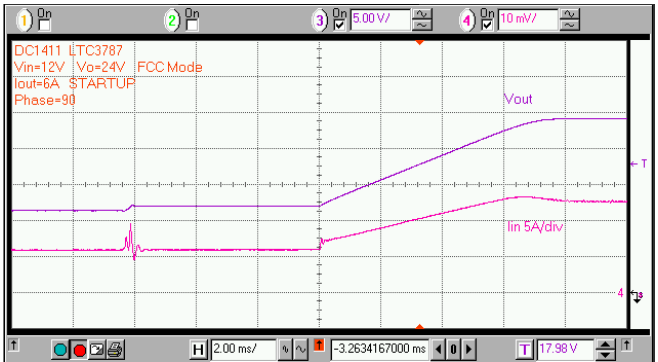


Figure 5. The DC1411 ramps the output slowly at startup without generating an input current surge.



REV.	DATE
000001	08/16/0
000002	
000003	
000004	

REV.	DATE
2	

Company Blvd. CA 95055 (408)432-1900 www.linear.com 9434-0807 Identical-For Customer Use Only
---

JS BOOST CONVERTER
UFD
1411A
SHEET 1 OF 1